

SF-P130TCV

13KG TOP LOAD WASHING MACHINE



ULTRA-LARGE, REGULAR SIZED, WASHING MACHINE



Features

- 13kg Ultra Large Capacity
- 4 Star Water Rating
- 3 Star Energy Rating
- Auto Self Clean Function
- Stylish Toughened Glass Lid with Soft Closing function
- Sensor Safety Lock Lid
- Allergy UK Approved 99% Mold & Bacteria Reduction - Auto Self Clean
- Dual Jet Shower Function
- Quick & Simple 4 Button Control Panel - on lid
- Fine Adjustment Settings for individual settings - on lid
- Powered Inverter controls tub and pulsator rotation speed for optimum operation
- Delayed Start Timer
- Auto Power Off
- 11 Washing Programs
- 730 RPM Spin Speed



**POWERED
INVERTER**

AUTO SELF CLEAN – The Tub Stain Fighter

Don't jremove dirt, stop it from building up – every time you do your laundry, the washing machine automatically cleans itself!

In a washing machine, dirt doesn't easily accumulate where water collects or where it hits during spin-drying. In places that aren't touched by water, however, dirt gradually accumulates with use.



 
Dirt on the outside of the stainless steel tub Dirt on the inside of the outer tub Dirt on the bottom of the stainless steel tub

*Hitachi washer-dryer. The level of dirt differs depending on conditions of use.


Tub Clean Program for Attached Dirt

Auto Self Clean cannot remove accumulated dirt. Using special detergent, the Tub Clean program thoroughly removes attached dirt. Regularly using this program together with Auto Self Clean keeps the tub clean.

A shower of clean water cleans both the tubs as the stainless steel tub rotates at high speed.

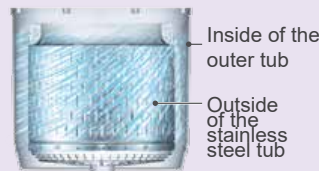

 Blades and tub rotate to powerfully agitate water in the stainless steel tub and clean off dirt.

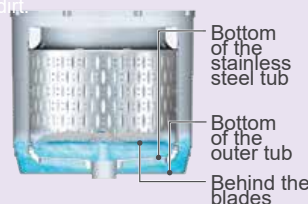

Effective removal of mold and bacteria endorsed by Allergy UK



Ultra Power 4-Step Wash

Thoroughly penetrates deep into fabrics to effectively remove stubborn stains by controlling the water level to dissolve the detergent in 4 steps and to maximize cleaning power.



Step 1 Dissolve

Dissolve the detergent at the lowest water level.

Step 2 Penetrate

Enable the condensed detergent liquid to penetrate deep into the fabrics.

Step 3 Soak

Detergent comes into complete contact with the surface of clothes.

Step 4 Remove

Remove stubborn dirt at the normal water level.

Easy Dissolver



Dissolve powder detergent powerfully to minimize the residue.

4-Button Control

With just four buttons, you can start washing. Alternately adjust wash settings (even while the unit is operating) with the simple, easy to use buttons on the glass lid. Adjust water power and water level while looking at clothes being washed in the tub.



640mm (W) x 1,047mm (H) x 684mm (D)